
GUIDELINES TO CHANGE A VAC MOTOR

STEP 1: Take out the orange cover



Unscrew the three screws.

STEP 2: Take out the white top body

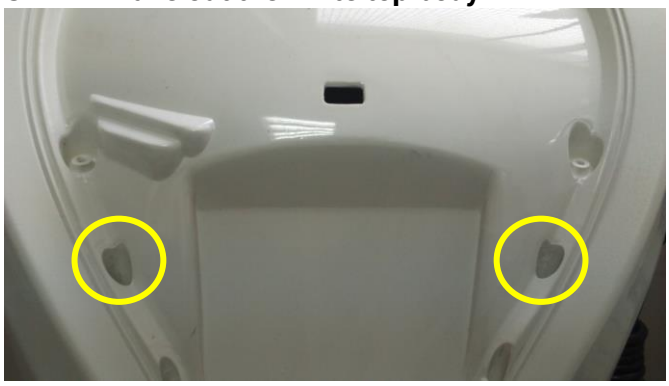

Unscrew the four screws.





Untighten the two black nuts and introduce the two black wires

C/ Vereda de los Barros, 67
Pol.Ind. Ventorro del Cano. 28925 Alcorcón, Madrid (Spain)
Tel. +34 91 633 34 93 / Fax. +34 91 633 49 31
info@sachvac.com / **www.sachvac.com**


STEP 3: Disconnect the motor connections








STEP 4: Take out the first black motor cover (muffler)

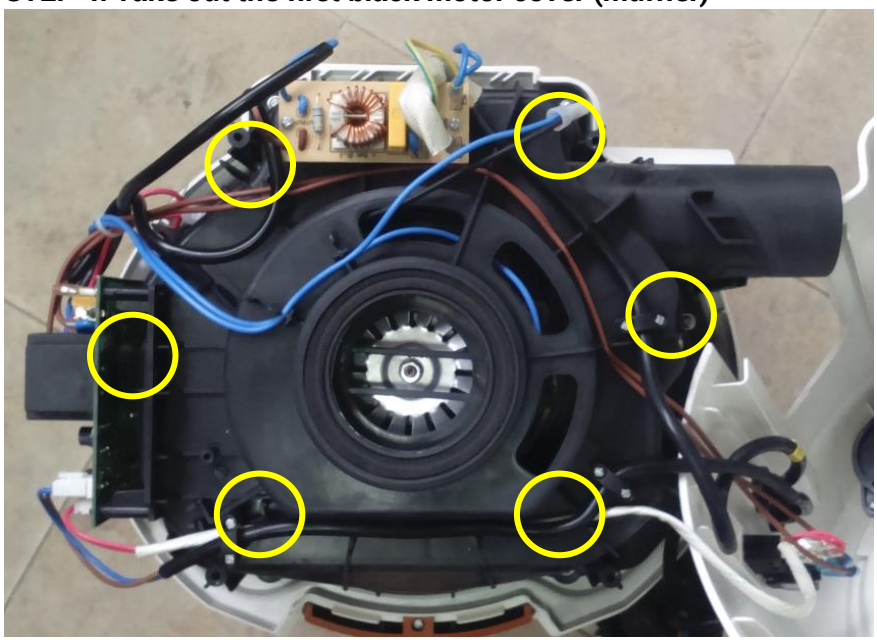

Unscrew the 6 screws

C/ Vereda de los Barros, 67
Pol.Ind. Ventorro del Cano. 28925 Alcorcón, Madrid (Spain)
Tel. +34 91 633 34 93 / Fax. +34 91 633 49 31
info@sachvac.com / **www.sachvac.com**

STEP 5: Take out the second black motor cover

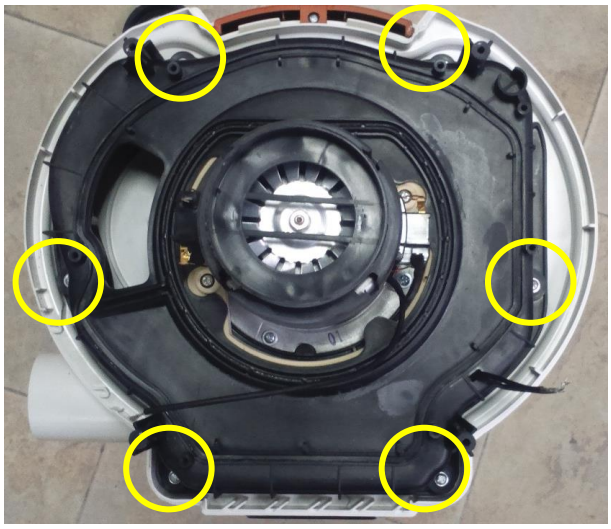

Unscrew the 6 screws

STEP 6: Change the motor for a new one



Take careful to put again the rubber gaskets,

STEP 7: Assemble all the parts in a reverse way that you have taken out

C/ Vereda de los Barros, 67
Pol.Ind. Ventorro del Cano. 28925 Alcorcón, Madrid (Spain)
Tel. +34 91 633 34 93 / Fax. +34 91 633 49 31
info@sachvac.com / **www.sachvac.com**