
Instrucciones cambio motor ECO

1. **Take out the top cover from the ECO control unit until you can access the motor.**

   Remove the top cover by pulling on one end, as it is press-fitted.




Remove the 4 screws from the second top cover and take it off.

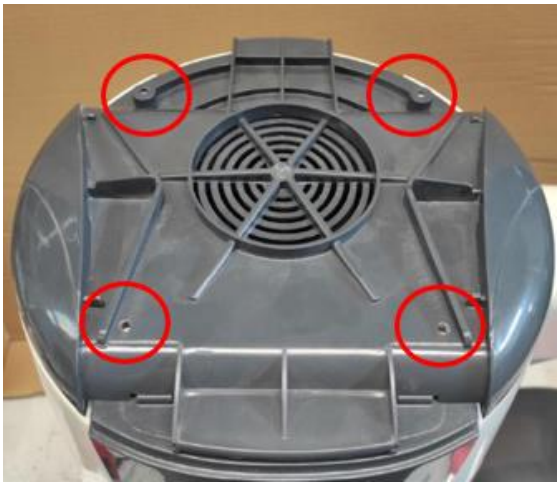

Remove the 4 screws from the upper body and take it off to access the ECO motor.




2º Remove the two screws that holding the muffler and remove it.

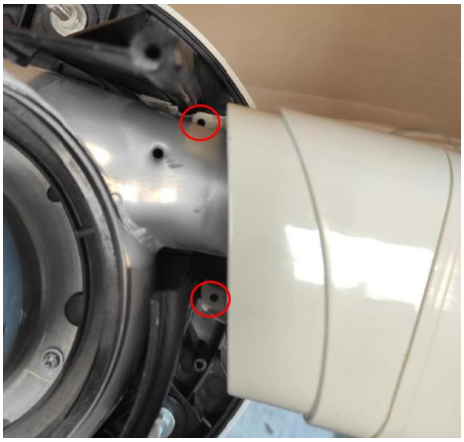

3º Remove the 3 metal clips that holding the ECO motor in place to release it and remove it.

4º Keep the lower gasket and upper gasket for replacement of the ECO motor, as they will be needed for the new motor.

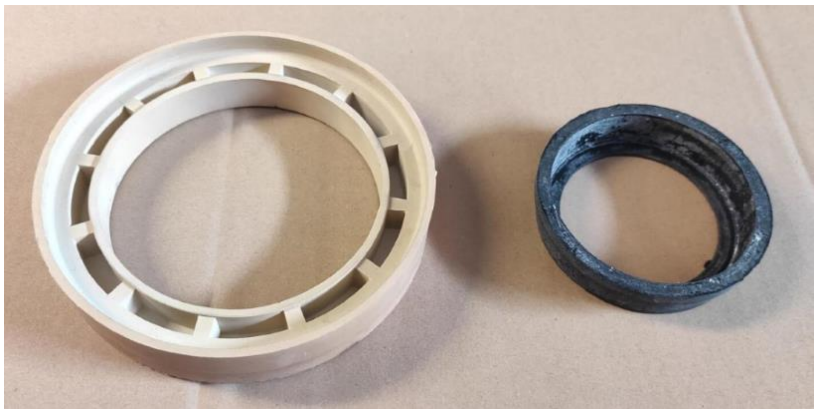

5º Place the new ECO motor on the lower joint and orient the air outlet together with the exhaust joint towards the connection with the silencer.



6º Screw on the new ECO motor retaining metal clips (included with the new motor).







7º Screw on the silencer, ensuring that the gasket remains inside it.




8º Place the upper gasket on the new ECO motor.



9º Place the motor thermal switch near the motor stages or the metal part and connect as the old motor

10º Connect the motor wiring to the output of the M1-M2 electronic card.

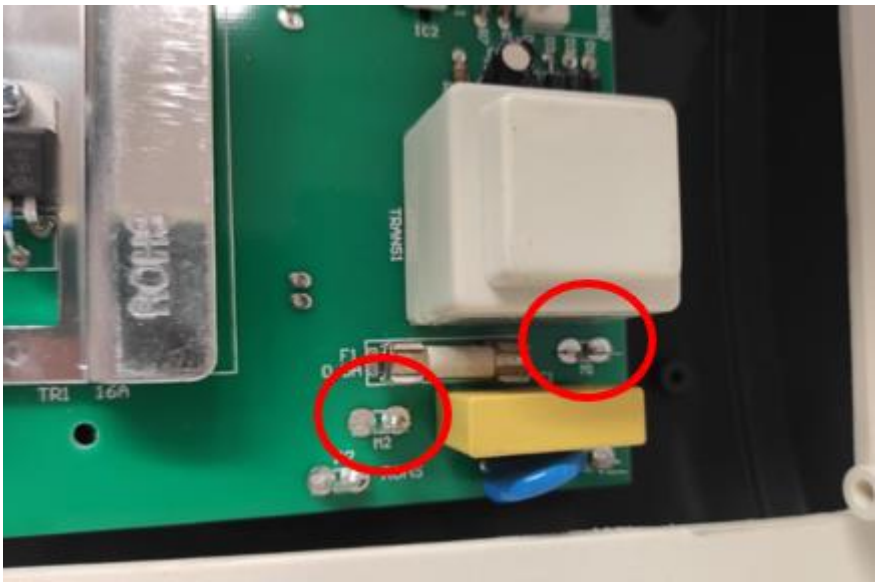

10º Close the central vacuum unit, following the disassembly steps in reverse order.